 


INSTRUCTION MANUAL AND USE

TELEC SERIES



Note: Before start managing the projector read the whole manual carefully.
Before start manipulating the luminaire, make sure electric current is off.
Luminaires must be manipulated by qualified professional staff.

Assembly and electric connection

1. Secure the projector to the working area firmly, through the steel lyre, using the three fixing points. (Fig. 1)
2. Open the front panel of the projector to access to the electrical gear. (Fig. 2)
3. Power cable through the cable gland.
4. Peel the wire and connect the end to the connection points N, L and Ground. (Fig. 3)
5. First make sure the power of the lamp is the correct one, afterwards fit it, and check that lamp keeps firmly inside lampholder.
6. Close the front panel of the projector, focus the projector and adjust to the desire position by pressing the two screws firmly, screws are placed on the laterals of the luminaire. (Fig. 4)

Lamp replacement

1. Open the front panel of the projector and access to the lampholder. (Fig. 1)
2. Replace the lamp making sure the power of the new lamp is the correct one and fix it firmly to the lampholder.
3. Close the front panel of the projector. (Fig. 4)

Fig. 1

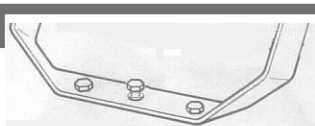


Fig. 2

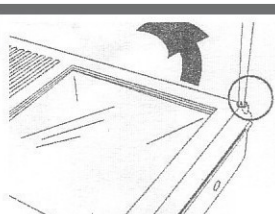


Fig. 3



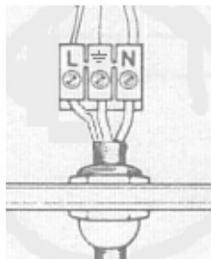



Fig. 4

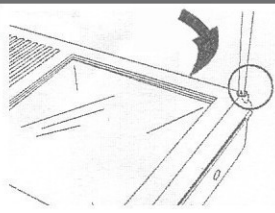

Electric diagram


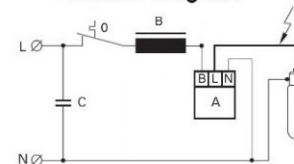


Dimensions

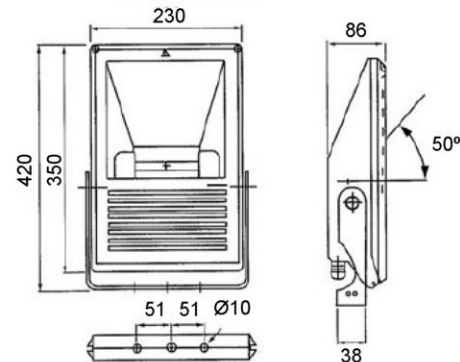

Operation position

Angle of orientation

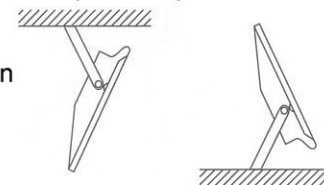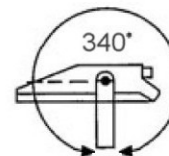

Maximum surface exposed to air: 0,08m²

Weight: 4,2Kg. (70W.) : 5,2Kg. (150W.)

Assembly: 1,5 - 8 mts